

Installation instructions


Pretec Elevator Chain link 40kN

It is important that the bent threaded rod is fixed in a standing position when concrete is poured.

The chain link can be rotated around its center to fix the threaded to nearby reinforcement.

It is not allowed to cut the threaded rod.

Regular execution is with stirrups mounted next to the chain link box (40kN). Contact responsible structural designer/engineer if the stirrups are not present on the concrete element drawing. Under some circumstances for 20kN they can be excluded, if verified by designer/engineer.

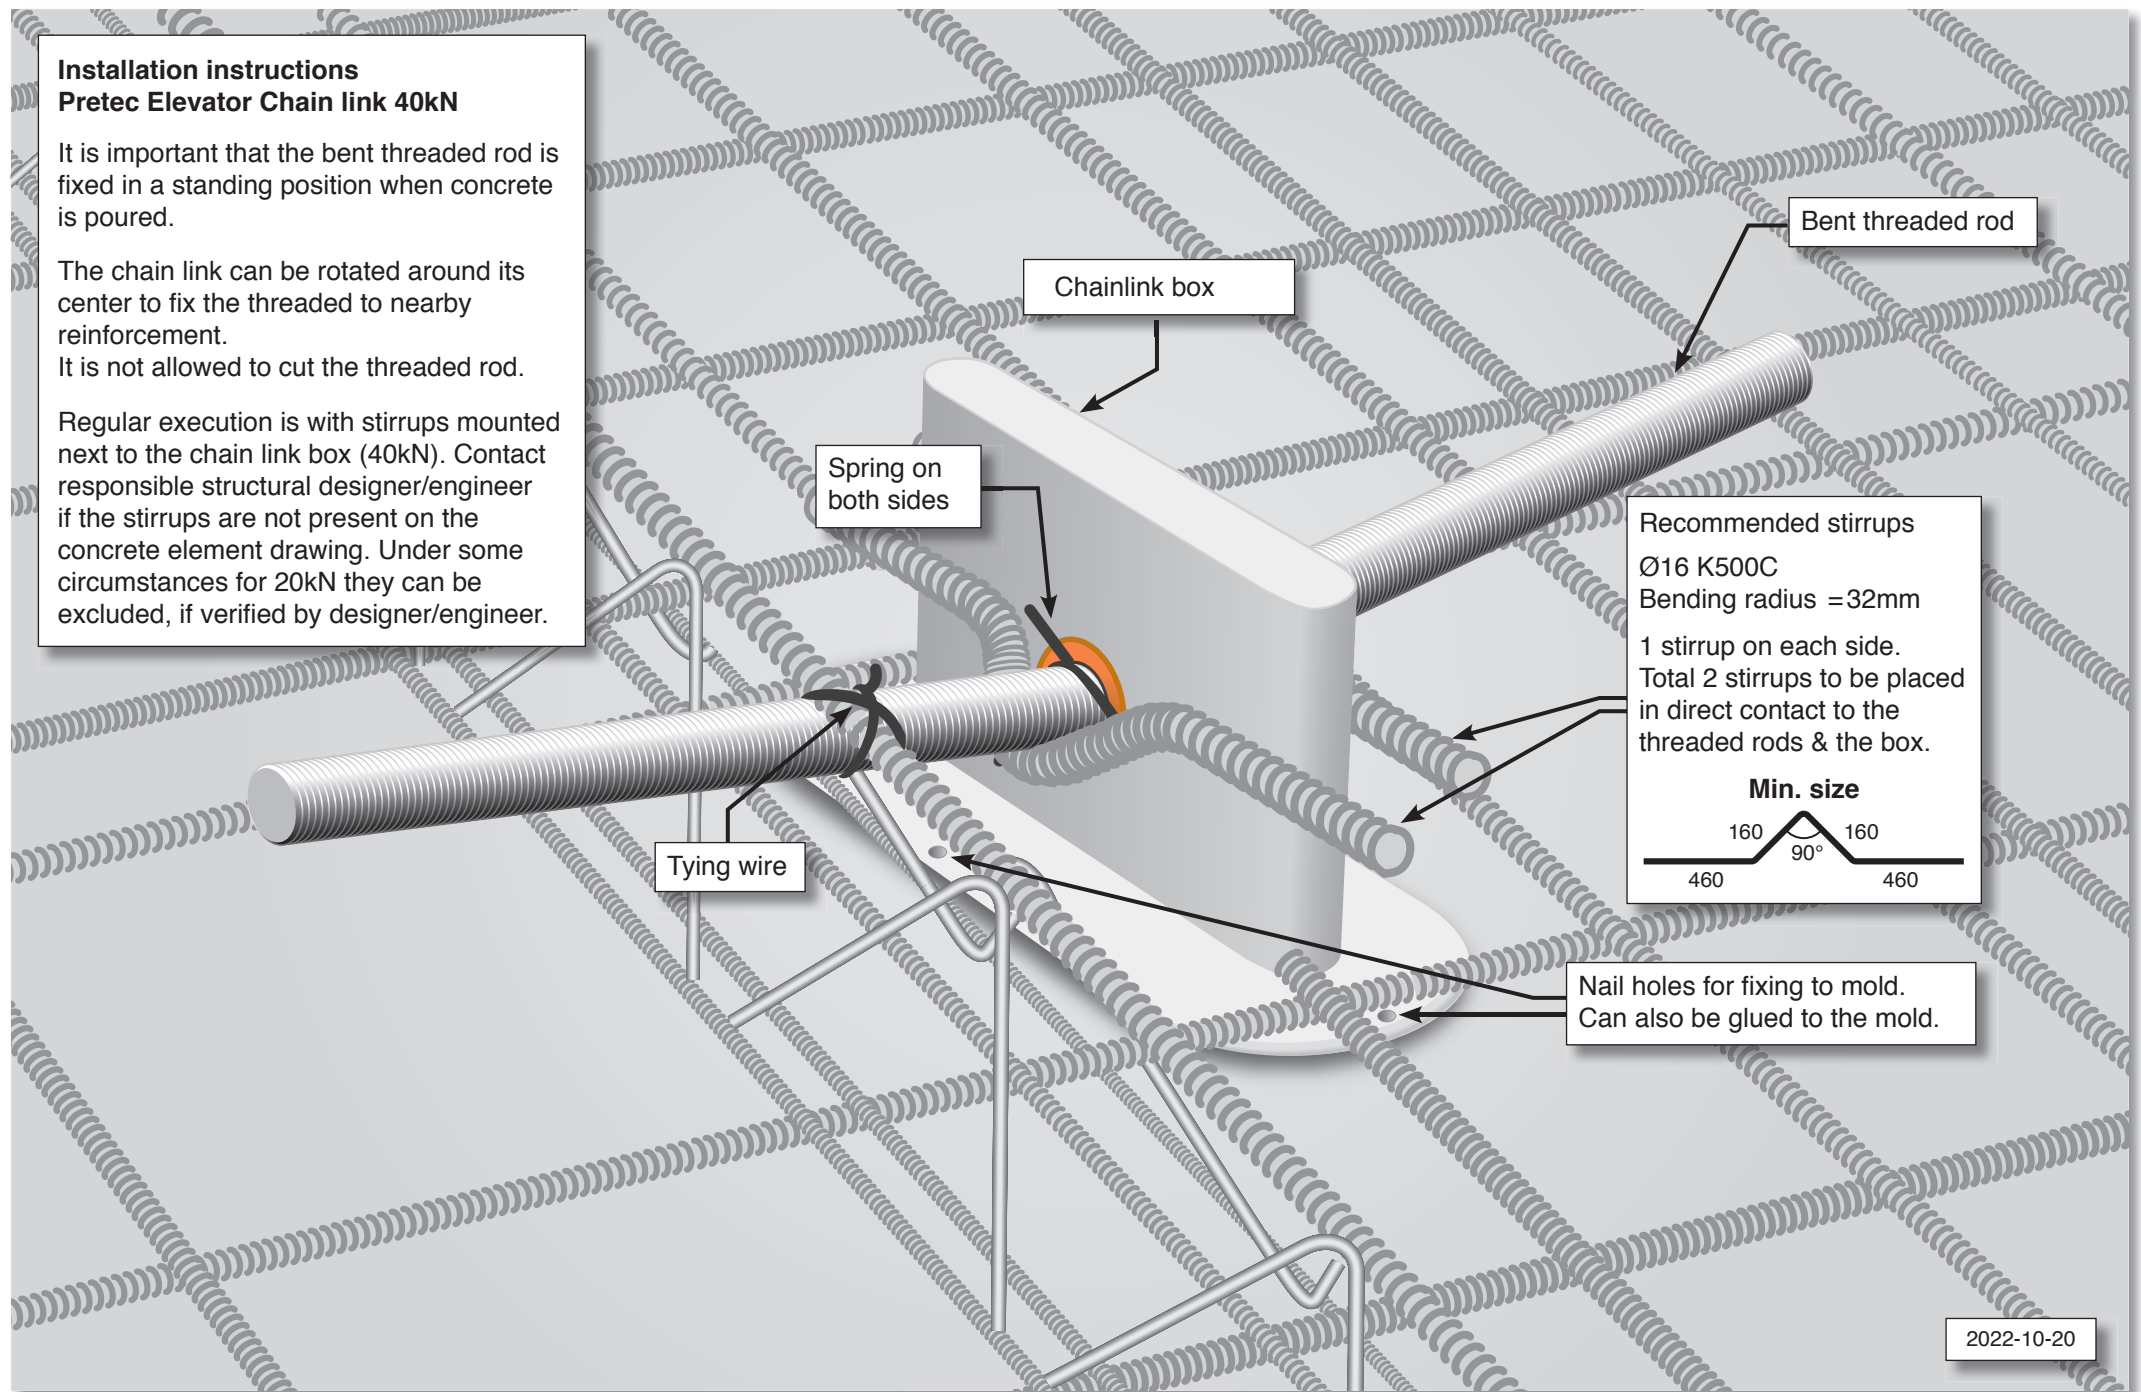


Recommended stirrups

Ø16 K500C
Bending radius = 32mm

1 stirrup on each side.
Total 2 stirrups to be placed
in direct contact to the
threaded rods & the box.

Min. size

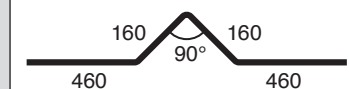

Nail holes for fixing to mold.
Can also be glued to the mold.